



# Operating instructions

WineCooler V6000 Supreme

Refrigerating appliance

Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarize yourself with the appliance and get the best use out of it.

**Please follow the safety precautions.**

**Modifications**

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliances is reserved.

**Validity**

These operating instructions apply to:

| Model designation           | Type       | Size system |
|-----------------------------|------------|-------------|
| WineCooler V6000 60 Supreme | WC6T-51154 | Euro 60     |

Variations depending on the model are noted in the text.

# Table of contents

|           |                                                   |           |           |                              |           |
|-----------|---------------------------------------------------|-----------|-----------|------------------------------|-----------|
| <b>1</b>  | <b>Safety precautions</b>                         | <b>4</b>  | <b>12</b> | <b>Disposal</b>              | <b>23</b> |
| 1.1       | Symbols used .....                                | 4         | <b>13</b> | <b>Index</b>                 | <b>24</b> |
| 1.2       | General safety precautions .....                  | 4         | <b>14</b> | <b>Service &amp; Support</b> | <b>27</b> |
| 1.3       | Appliance-specific safety precautions.....        | 5         |           |                              |           |
| 1.4       | Appliance installation .....                      | 5         |           |                              |           |
| 1.5       | Instructions for use .....                        | 5         |           |                              |           |
| <b>2</b>  | <b>Using for the first time</b>                   | <b>8</b>  |           |                              |           |
| <b>3</b>  | <b>Appliance description</b>                      | <b>8</b>  |           |                              |           |
| 3.1       | Structure .....                                   | 8         |           |                              |           |
| 3.2       | Operating and display elements .....              | 9         |           |                              |           |
| <b>4</b>  | <b>Operating the appliance</b>                    | <b>10</b> |           |                              |           |
| 4.1       | Basic procedure.....                              | 10        |           |                              |           |
| 4.2       | Overview of start screen.....                     | 10        |           |                              |           |
| 4.3       | Switching the appliance on.....                   | 10        |           |                              |           |
| 4.4       | Setting the temperature .....                     | 11        |           |                              |           |
| 4.5       | Switching the appliance off.....                  | 12        |           |                              |           |
| <b>5</b>  | <b>Using the appliance functions and settings</b> | <b>12</b> |           |                              |           |
| 5.1       | Procedure for display with touch function.....    | 12        |           |                              |           |
| 5.2       | Using the functions and settings.....             | 13        |           |                              |           |
| 5.3       | Brief description of the appliance functions..    | 18        |           |                              |           |
| <b>6</b>  | <b>Interior and accessories</b>                   | <b>18</b> |           |                              |           |
| <b>7</b>  | <b>Tips and tricks</b>                            | <b>18</b> |           |                              |           |
| 7.1       | General information on using the appliance .      | 18        |           |                              |           |
| 7.2       | Notes on storage of wine .....                    | 19        |           |                              |           |
| 7.3       | Notes on saving energy.....                       | 19        |           |                              |           |
| <b>8</b>  | <b>Care and maintenance</b>                       | <b>19</b> |           |                              |           |
| 8.1       | General cleaning instructions.....                | 19        |           |                              |           |
| 8.2       | Cleaning the interior .....                       | 20        |           |                              |           |
| 8.3       | Door seals .....                                  | 20        |           |                              |           |
| 8.4       | When the appliance is not in use .....            | 20        |           |                              |           |
| 8.5       | Cleaning the condenser .....                      | 20        |           |                              |           |
| <b>9</b>  | <b>Noises</b>                                     | <b>21</b> |           |                              |           |
| <b>10</b> | <b>Trouble-shooting</b>                           | <b>21</b> |           |                              |           |
| <b>11</b> | <b>Technical data</b>                             | <b>22</b> |           |                              |           |

# 1 Safety precautions

## 1.1 Symbols used



Unauthorized repairs could result in unforeseen dangers for the user, for which the manufacturer cannot accept liability. Repairs should only be undertaken by an authorized service technician, otherwise any subsequent damage will not be covered by the warranty.



**Denotes important safety precautions.**

**Failure to observe said precautions can result in injury or damage to the appliance or equipment!**



Information and notes to be observed.



Information on disposal



Information about the operating instructions



Symbol ISO 7010 W021

**WARNING: Risk of fire / flammable materials**

- ▶ Indicates step-by-step instructions.
  - Describes how the appliance reacts to the steps taken.
- Indicates a list.

## 1.2 General safety precautions



- Read the operating instructions before using the appliance for the first time.



- This appliance can be used by children aged 8 and above and by persons with reduced

physical, sensory or mental capabilities, or lack of experience and/or knowledge, provided they are supervised or have been instructed on the safe use of the appliance and have understood the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be undertaken by children without supervision.

- If an appliance is not equipped with a mains cable and a plug or other means for disconnecting from the mains with a contact opening on each pole complying with the conditions of overvoltage category III for full isolation, an isolating device must be incorporated into the permanently installed electrical installation in accordance with the installation regulations.
- If the mains cable of this appliance is damaged, it must be replaced by the manufacturer or its Customer Services or a similarly qualified person in order to avoid hazard.

### 1.3 Appliance-specific safety precautions



- Children aged 3 to 8 years are allowed to load and unload refrigerating appliances.
- **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

### 1.4 Appliance installation



- The appliance must be installed by qualified persons.
- Each stage of the installation process must be performed and checked in full and in the order specified.
- **WARNING:** To avoid hazards due to the instability of the appliance, the appliance must be secured as described in the installation instructions.
- Electrical connections must be carried out by qualified personnel in accordance with the guidelines and standards for low-voltage installations and the specifications of the local electricity supply companies.
- A plug-in appliance may only be connected to a socket outlet with an earthing contact, installed according to specifications. An all-pole mains separating device with a 3 mm contact opening should be provided in the domestic wiring system. Switches, plug and socket devices, circuit breakers and fusible cut-outs that are accessible after installation and have all-pole switching are permissible as isolating devices. Effect-

ive earthing and separately installed neutral and earth conductors ensure safe and fault-free operation. After installation, live parts and cables with basic insulation must not be accessible. Check old installations.

- Refer to the identification plate for information on the required mains voltage, current type and fuse protection.
- No action is required to adapt the appliance to a mains frequency of 50 or 60 Hz.
- All plastering, plasterboarding, wallpapering or painting work must be carried out prior to installing the appliance.
- Efficient repairs can only be guaranteed if it is possible to uninstall the complete appliance at any time without causing any damage.

### 1.5 Instructions for use

#### Before initial commissioning

- The appliance must be installed and connected to the electricity supply in accordance with the separate installation instructions. Have a qualified fitter/electrician carry out the necessary work.
- Electrical safety (protection against contact) must be ensured by the installation.
- If the appliance is visibly damaged, do not use it. Contact our Customer Services. Do not use the appliance if the cold circuit is damaged.
- **WARNING:** The required room volume for the appliance is at least. 1 m<sup>3</sup> / 8 g refrigerant (isobutane R600a). If the room is too small, a leak can result in a flammable mixture of air and gas. The refrigerant load capacity can be found on the identification plate.
- **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

1 Safety precautions

- Do not use extension cables, if possible.
- **WARNING:** When installed, it is important to ensure that the air inlets and vent openings are not covered or blocked.
- Retain these operating instructions for future reference.
- Operating instructions for the appliance can be downloaded from [www.vzug.com](http://www.vzug.com).
- Dispose of the packaging material as specified by local regulations.

Correct use

- This appliance is intended to be used exclusively for the storage of wine. The appliance must only be used as described in the operating instructions.
- This appliance is intended for use in the home and similar settings such as: in staff kitchens in shops and offices; in agricultural establishments; by guests in hotels, motels and other accommodation establishments; in bed and breakfast establishments. This appliance is not intended for use in the professional sector.
- The appliance corresponds to recognised technology standards and the relevant safety regulations. Proper use of the appliance is essential to avoid damage and accidents. Please therefore follow the precautions given in these operating instructions.
- No liability is assumed for any damage caused by improper or incorrect use or by repairs carried out by unqualified people. In this case, any warranty or other liability claims are deemed null and void.
- The appliance is permanently installed and shall not be moved while in operation.
- Any repairs, modifications or manipulations on or in the appliance, especially any electrically live parts, may only be carried out by the manufacturer, its Customer Services or a similarly qualified person. If carried out incorrectly, re-

pairs may cause serious injury or damage to the appliance and fittings, and may affect the functioning of the appliance. If the appliance is not working properly or if a repair is needed, follow the instructions given in the ‘Service & support’ chapter. Please contact our Customer Services if necessary.

- Only original spare parts may be used.

Foreseeable misuse

This appliance is not permitted to be used for the following applications:

- The storage and cooling of medicines, blood plasma, laboratory preparations or similar substances and products for medical purposes.
- Use in areas exposed to an explosion hazard.

Any misuse of the appliance is prohibited.

Climate class

This appliance is intended for use in a limited ambient temperature range to ensure proper operation. Information for the applicable climate class can be found on the identification plate.

| Climate class | Ambient temperature |
|---------------|---------------------|
| SN            | +10 °C to +32 °C    |
| N             | +16 °C to +32 °C    |
| ST            | +16 °C to +38 °C    |
| T             | +16 °C to +43 °C    |
| SN-ST         | +10 °C to +38 °C    |
| SN-T          | +10 °C to +43 °C    |

Note on use

- **WARNING:** Do not use electrical appliances in the wine storage compartments unless they are recommended by the manufacturer.
- Only store high-proof alcohol tightly sealed and upright. Do not store explosive substances or products containing flammable propellants (e.g. spray cans) in the appliance. Danger of explosion!

- **WARNING:** Do not damage the refrigerant circuit. This appliance is free from CFCs and FCs, and contains small quantities of the environmentally friendly but flammable refrigerant isobutane (R600a). Leaking refrigerant can catch fire. In the event of damage, avoid using any type of open flame and sources of ignition, as isobutane is flammable. Thoroughly ventilate the room for a few minutes. Switch off the appliance and disconnect the electrical supply. Do not switch on any sources of energy. Inform Customer Services.

### **Caution: Risk of injury!**

- Be careful not to put fingers in the door hinges, as there is a risk of injury if the appliance door is moved. Particular care should be taken when children are around.
- When inserting the pull-out elements, avoid getting your fingers into the guide rails at all costs.
- **WARNING:** Appliances shall be disconnected from their power supply during cleaning or maintenance and when replacing parts. Pulling out the mains plug or switching off the fuse. Never pull the mains plug out of the mains socket by the cable or with wet hands. Hold the mains plug and pull it straight out of the socket.
- Do not look directly into the LED lighting system when the light is switched on to avoid visual impairment.

### **Caution: Risk to life!**

- Packaging materials, e.g. plastic film and polystyrene, can be dangerous for children. Danger of suffocation! Keep packaging material away from children.
- Disconnect the appliance electricity supply when performing maintenance; this includes replacing lights (if the operating instructions describe how to remove them). To do this, remove the screw fuses from the holders completely and switch off the circuit breaker or disconnect the mains plug.

### **How to avoid damaging the appliance**

- Clean the appliance just with water or a mild soapy solution (water and washing-up liquid).


## 2 Using for the first time

Before operating the newly installed appliance for the first time, the following steps should be taken:

- ▶ Remove packaging and transport materials as well as any protective film from the interior.
- ▶ Clean the interior and accessories with lukewarm water or a mild soapy solution (water and washing-up liquid) and dry thoroughly.
- ▶ Check that all appliance door seals are completely dry and dry them if necessary.
- ▶ After switching the appliance on for the first time, it is recommended waiting for 12 hours without opening the doors or before loading bottles into it.

## 3 Appliance description

### 3.1 Structure

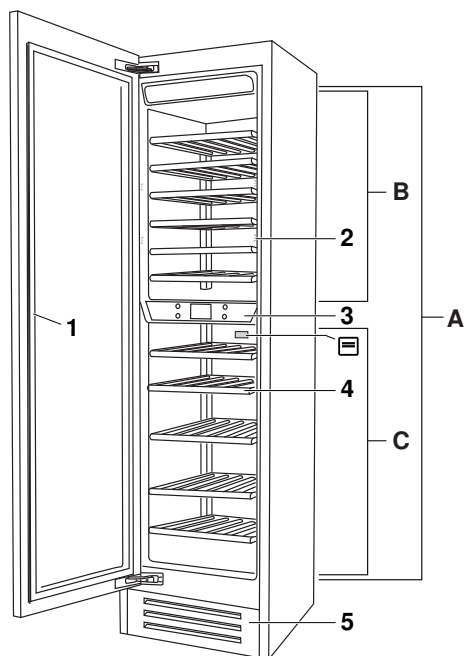

#### Temperature zones

- A Cooling compartment
- B Upper wine storage compartment
- C Lower wine storage compartment

#### Features

- 1 Appliance door
- 2 LED illumination
- 3 Operating and display elements
- 4 Fully extendable shelves
- 5 Condenser
-  Identification plate with serial number (SN)

## 3.2 Operating and display elements



### Navigation buttons

-  ON/OFF (hold for 3 seconds)
-  Home / Start screen
-  Acknowledge alarm
-  BACK: Cancel/Discard entry



### Navigation touch display



#### Functions

-  Humidity control
-  Permanent illumination
-  Sabbath mode
-  Daily illumination schedule



#### User setting

-  Date
-  Time
-  Language
-  Temperature unit °C / °F

#### Other settings

-  Restore factory setting
-  Condenser reminder
-  Demo mode
-  Information about the appliance
-  Service

## 4 Operating the appliance


### 4.1 Basic procedure



The appliance has a display with touch function. Submenus can be selected, messages confirmed and user settings activated or deactivated by touching the corresponding position in the display.

- Various functions and options can be selected by touching the corresponding symbols in the display or the navigation buttons.
- Scroll up or down to select the value to be set.
- Navigate the functions and settings by swiping to the left and right.
- Activated functions and settings are illuminated in **orange**; other selectable functions and settings are illuminated in **white**. Functions and settings that cannot be selected or changed are **greyed** out.
- Use the ↶ button at any time to cancel and discard a change to an existing setting and without the value of the operating step being accepted. After about 5 seconds without any interaction the setting is cancelled. The values set are not accepted.
- The actual values set are displayed when the door is opened. The appliance shows the status through an arrow symbol next to the temperature indication in the display until the temperatures are reached. An arrow pointing down indicates a cooling process; an arrow pointing up indicates a rise in temperature in the corresponding zone.

### 4.2 Overview of start screen

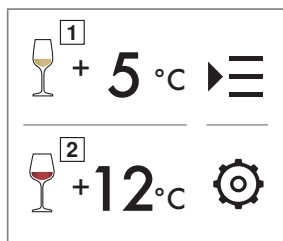

- 1** Upper wine storage compartment
- 2** Lower wine storage compartment
- ▶≡ Navigation to the functions
- ⚙ Navigation to the settings

### 4.3 Switching the appliance on

- ▶ Plug in the appliance at the mains socket.
- ▶ Hold the ⏻ button depressed for 3 seconds.
  - The appliance is switched on.
  - The V-ZUG logo (display symbol) appears.
  - The initial test runs (takes about 3 minutes).



A newly installed appliance takes at least 12 hours (empty state) – keeping the door closed – to reach its normal operating temperatures. Any error message that appears during this time is deactivated by pressing the alarm button.




When the appliance is started for the first time if instead of the stand-by message a different message appears this means that the appliance has already started the cooling process. During the initial set-up, the settings cannot be changed until the set temperature is reached.

## 4.4 Setting the temperature

The desired temperature is entered by tapping the corresponding zone on the display. The method is identical for both wine storage compartments.

### Procedure

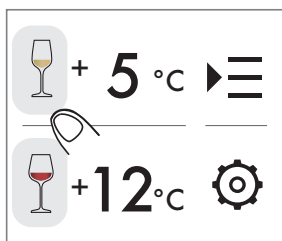


- ▶ Tap the desired cooling area at the top/bottom.
- Upper wine storage compartment: +5 °C to 18 °C (41 °F to 64 °F).
- Lower wine storage compartment: +5 °C to 18 °C (41 °F to 64 °F).

Recommended temperature setting for long-term storage of wines: 10 °C (50 °F) to 12 °C (54 °F).

**Note:** The display symbol (red wine/white wine) for the respective zone changes in the start screen display according to the selected temperature.

- The white wine symbol appears at a temperature setting of +5 °C to 9 °C (41 °F to 48 °F).
- The red wine symbol appears at a temperature setting of +10 °C to 18 °C (49 °F to 64 °F).
- ▶ Select the desired temperature for the selected zone by scrolling up or down.
  - The selected value is displayed in **orange**.

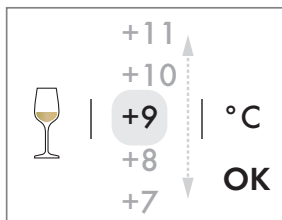

- ▶ Confirm with the **OK** button to accept the entry.
  - The temperature setting has been successfully completed.
  - The display symbol (red wine/white wine) of the respective zone changes according to the selected temperature. It is then shown in the start screen display.
  - The temperature may not be reached for a couple of hours, depending on the setting.



When storing a combination of red and white wine, we recommend storing white wine in the upper wine storage compartment and red wine in the lower wine storage compartment. The effective temperature of the lower zone can be temporarily colder at low temperature settings in combination with high temperature settings in the upper zone and cause product damage. In this case, use a higher temperature setting. If the door is open for longer periods or if the temperature settings in the two zones differ greatly, the effective temperature may temporarily deviate from the setpoint value.



The symbol  (value change locked) indicates that changes cannot be applied at this point. If certain functions (e.g. holiday function) are activated,  is displayed and signals that no temperature change can be applied. This is the case until the corresponding function is deactivated.

### 4.5 Switching the appliance off

- ▶ Hold the  button depressed for 3 seconds.
  - Confirm the security questions that follow with **Yes**.
  - The appliance is switched off.


If the appliance is being taken out of operation, e.g. for repair work or disposal:

- ▶ Remove the mains plug from the mains socket.
- ▶ When not in use for an extended period of time: Empty and clean the appliance.  
Leave the appliance doors and drawers open to prevent unpleasant odours forming.


## 5 Using the appliance functions and settings

### 5.1 Procedure for display with touch function


By way of example: Activating the humidity control

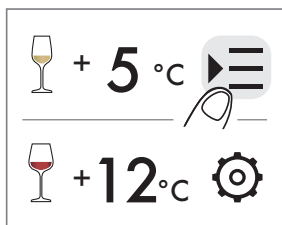

- ▶ Touch the  button.

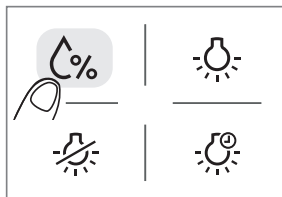

- ▶ Select the  button.

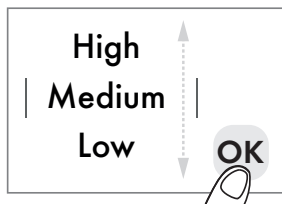

- ▶ Required intensity: Select **High, Medium or Low** by scrolling up or down.
- ▶ Confirm with **OK**.



- The  function is activated and displayed in **orange** in the functions (only for the high or medium intensity setting).

## 5.2 Using the functions and settings

| Function                                                                                               | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|--------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  Humidity control       | Regulates the humidity level for long-term and gentle storage of wines.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Activating</b>                                                                                      | For how to do this, see: Procedure for display with touch function (see page 12).                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Deactivating</b>                                                                                    | <ul style="list-style-type: none"> <li>▶ Touch the  button and select .</li> <li>▶ Scroll down and select intensity «Low».</li> <li>▶ Confirm with <b>OK</b>. <ul style="list-style-type: none"> <li>– The  function is deactivated and displayed in <b>white</b> in the overview.</li> </ul> </li> </ul> |
|  Permanent illumination | Permanent illumination of the interior, even when the appliance door is closed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Activating</b>                                                                                      | <ul style="list-style-type: none"> <li>▶ Touch the  button and select .</li> <li>▶ «Activate permanent illumination?» appears. Confirm with <b>Yes</b>. <ul style="list-style-type: none"> <li>– The  function is activated and displayed in <b>orange</b> in the overview.</li> </ul> </li> </ul>  |
| <b>Deactivating</b>                                                                                    | <ul style="list-style-type: none"> <li>▶ Touch the  button and select .</li> <li>▶ «Activate permanent illumination?» appears. Confirm with <b>No</b>. <ul style="list-style-type: none"> <li>– The  function is deactivated and displayed in <b>white</b> in the overview.</li> </ul> </li> </ul>  |

| Function                                                                                                     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  Sabbath mode                | <p>The illumination is not affected by opening or closing the appliance door. Various functions are temporarily deactivated.</p> <hr/> <p><b>Activating</b></p> <ul style="list-style-type: none"> <li>▶ Preparing for the Sabbath: Touch the  button and select .</li> <li>▶ «Activate Sabbath mode?» appears. Confirm with <b>Yes</b>.</li> <li>▶ Select the desired duration «30 h / 54 h / 78 h».</li> <li>▶ Activate the Sabbath mode with <b>Yes</b>. <ul style="list-style-type: none"> <li>– The  function is activated. The message «Sabbath mode» appears in the display.</li> </ul> </li> </ul> <hr/> <p><b>Deactivating</b></p> <ul style="list-style-type: none"> <li>▶ Touch the display to end the active Sabbath mode.</li> <li>▶ «Activate Sabbath mode?» appears. Confirm with <b>No</b>. <ul style="list-style-type: none"> <li>– The  function is deactivated and displayed in <b>white</b> in the overview.</li> <li>– The initialization phase takes 3 minutes.</li> </ul> </li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                         |
|  Daily illumination schedule | <p>Illumination of the interior for a defined period of time every day.</p> <hr/> <p><b>Activating</b></p> <ul style="list-style-type: none"> <li>▶ First check that the appliance is showing the right date and time. If necessary: Adjust the  and  user settings.</li> <li>▶ Touch the  button and select .</li> <li>▶ «Activate daily illumination schedule?» appears. Confirm with <b>Yes</b>.</li> <li>▶ To make any more adjustments: Touch «Change».</li> <li>▶ Select a start and end time by scrolling through the hours and minutes and confirming each with <b>OK</b>. <ul style="list-style-type: none"> <li>– The  function is activated and displayed in <b>orange</b> in the overview.</li> </ul> </li> </ul> <hr/> <p><b>Deactivating</b></p> <ul style="list-style-type: none"> <li>▶ Touch the  button and select .</li> <li>▶ «Activate daily illumination schedule?» appears. Confirm with <b>No</b>. <ul style="list-style-type: none"> <li>– The  function is deactivated and displayed in <b>white</b> in the overview.</li> </ul> </li> </ul> |

| Setting                                                                                            | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                    | <b>Accessing the user settings</b>     <b>and other settings</b>    |
|  Date               | Set the date.<br><b>Adjusting</b> <ul style="list-style-type: none"> <li>▶ Touch the  button and select .</li> <li>▶ Select the «Year, month and day» by scrolling up or down and confirm each time with <b>OK</b>. <ul style="list-style-type: none"> <li>– The date set is saved.</li> </ul> </li> </ul>                                                                                                                                                                                   |
|  Time               | Set the time.<br><b>Adjusting</b> <ul style="list-style-type: none"> <li>▶ Touch the  button and select .</li> <li>▶ Select a «12» or «24» hour time format.</li> <li>▶ Select the «Hour and minutes» by scrolling up or down and confirm each time with <b>OK</b>. <ul style="list-style-type: none"> <li>– The time set is saved.</li> </ul> </li> </ul>                                                                                                                                   |
|  Language           | Set the language.<br><b>Adjusting</b> <ul style="list-style-type: none"> <li>▶ Touch the  button and select .</li> <li>▶ Select the desired «Language» by scrolling up or down.</li> <li>▶ Confirm with <b>OK</b>. <ul style="list-style-type: none"> <li>– The language set is saved.</li> </ul> </li> </ul>                                                                                                                                                                                |
|  °C / °F            | Switch the unit of temperature.<br><b>Adjusting</b> <ul style="list-style-type: none"> <li>▶ Touch the  button and select .</li> <li>▶ Touch the desired unit: «°C» or «°F»</li> <li>▶ Confirm with <b>OK</b>. <ul style="list-style-type: none"> <li>– The temperature unit set is saved.</li> </ul> </li> </ul>                                                                                                                                                                            |
|  Factory settings | Restore factory settings.<br><b>Selecting</b> <ul style="list-style-type: none"> <li>▶ Touch the  button and select .</li> <li>▶ Confirm the info and security questions that follow with <b>Yes</b>. <ul style="list-style-type: none"> <li>– The message «Reset running...» follows.</li> <li>– Please wait until the message «Reset completed» appears.</li> </ul> </li> </ul>                                                                                                        |

| Setting                                                                                             | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  Condenser reminder | Reminder to regularly clean the condenser.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                                                                                                     | <b>Activating</b> <ul style="list-style-type: none"> <li>▶ Touch the  button and select .</li> <li>▶ «Activate reminder» appears. Confirm with <b>Yes</b>.               <ul style="list-style-type: none"> <li>– «Next reminder in 180 days» appears in the display.</li> </ul> </li> <li>▶ To exit the dialogue, press <b>OK</b>.               <ul style="list-style-type: none"> <li>– The  function is activated and displayed in <b>orange</b> in the overview.</li> <li>– A reminder appears in 180 days.</li> </ul> </li> </ul>          |
|                                                                                                     | <b>Deactivating</b> <ul style="list-style-type: none"> <li>▶ Touch the  button and select .</li> <li>▶ «Next reminder...» appears along with the number of days remaining to the next reminder. Confirm with <b>OK</b>.</li> <li>▶ «Should the reminder remain active?» appears. Confirm with <b>No</b>.</li> <li>▶ «Deactivate reminder?» appears. Confirm with <b>Yes</b>.               <ul style="list-style-type: none"> <li>– The  function is deactivated and displayed in <b>white</b> in the overview.</li> </ul> </li> </ul>           |
|                                                                                                     | <b>Resetting</b> <ul style="list-style-type: none"> <li>▶ Touch the  button and select .</li> <li>▶ «Next reminder...» appears along with the number of days remaining to the next reminder. Touch <b>Reset</b>.</li> <li>▶ «Reset reminder?» appears. Confirm with <b>Yes</b>.               <ul style="list-style-type: none"> <li>– «Next reminder in 180 days» appears in the display.</li> <li>– The  function is reset and displayed in <b>orange</b> in the overview.</li> <li>– A reminder appears in 180 days.</li> </ul> </li> </ul> |

| Setting                                                                                     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  Demo mode   | <p>This setting enables specialist retailers to put the appliance into the showroom mode for demonstration purposes. The demo mode enables functions to be demonstrated without the appliance being switched on.</p> <p>Note: This setting is not recommended for private use. The demo mode can only be activated with a valid password.</p> <hr/> <p><b>Activating</b></p> <ul style="list-style-type: none"> <li>▶ Touch the  button and select .</li> <li>▶ «Activate demo mode?» appears. Confirm with <b>Yes</b>.</li> <li>▶ Enter the required password.             <ul style="list-style-type: none"> <li>– The  function is activated and displayed in <b>orange</b> in the overview.</li> </ul> </li> </ul> <hr/> <p><b>Deactivating</b></p> <ul style="list-style-type: none"> <li>▶ Touch the  button and select .</li> <li>▶ «Deactivate demo mode?» appears. Confirm with <b>Yes</b>.</li> <li>▶ Enter the required password.             <ul style="list-style-type: none"> <li>– The  function is deactivated and displayed in <b>white</b> in the overview.</li> </ul> </li> </ul> |
|  Information | <p>Information about the appliance</p> <hr/> <p><b>Selecting</b></p> <ul style="list-style-type: none"> <li>▶ Touch the  button and select .</li> <li>– Information about the appliance is displayed.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|  Service     | <p>The service setting can only be accessed by Customer Services with a valid password.</p> <hr/> <p><b>Selecting</b></p> <ul style="list-style-type: none"> <li>▶ Touch the  button and select .</li> <li>▶ «Access service area? Password required» appears. Confirm with <b>Yes</b>.</li> <li>▶ Enter the required service code.             <ul style="list-style-type: none"> <li>– Service data appears.</li> </ul> </li> <li>▶ Confirm with <b>Enter</b>.             <ul style="list-style-type: none"> <li>– The test starts.</li> </ul> </li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

## 5.3 Brief description of the appliance functions

### Sabbath mode

When the Sabbath mode is activated, all visual and acoustic warnings are turned off until it is manually deactivated. The illumination is not affected by opening or closing the door. Certain functions are ended when the Sabbath mode is activated; no acoustic signal is emitted.



The appliance doors must be closed firmly as the visual and acoustic warnings are turned off.




**When the Sabbath mode is activated, no error messages are displayed and no warnings are given. In certain circumstances, the appliance switches to the emergency mode or cannot maintain the cooling temperatures for other reasons.**

### Condenser reminder

If the setting is activated, a reminder to manually clean the condenser appears every 180 days. For how to do this, see: Care and maintenance (see page 19).

## 6 Interior and accessories

### Shelves

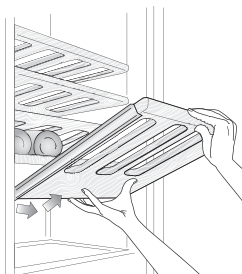

The shelves are not height-adjustable. They can be taken out for cleaning.

- ▶ First remove any bottles from the shelves.
- ▶ Pull each shelf completely out and tilt upwards until the rollers slide out of their brackets.
- ▶ Take out the shelf.



The second-bottom shelf must be removed to accommodate magnum bottles (1.5 litre wine bottles) on the bottom shelf.

## 7 Tips and tricks

### 7.1 General information on using the appliance

- When closing an appliance door make sure that it forms a proper seal all the way round.
- Depending on the storage conditions, it can take several hours for wine bottles to cool down from room temperature to the temperature of the cooling compartment.
- Opening the door for long periods can cause a significant increase of the temperature in the cooling zones of the appliance.
- Surfaces that can come in contact with food and accessible drainage systems must be cleaned regularly.
- Changing the temperature setting has no effect on the cooling rate.

- Placing a warm or cold bottle directly in front of a temperature sensor (integrated at the top, in the left-hand side wall of each cooling compartment) can affect the temperature regulation of the refrigerating appliance adversely: it may cool too little or too much.
- Make sure that the air outlets are not completely blocked by bottles.

## 7.2 Notes on storage of wine

The improvement of wine quality over time and its shelf life in general depend on the varietal characteristics and the type of wine. Ideal drinking temperatures:

|          |                                                                                           |
|----------|-------------------------------------------------------------------------------------------|
| 5–8 °C   | Champagne, sparkling wines, Sekt, Prosecco                                                |
| 8–12 °C  | Young white wines (e.g. Chasselas, Müller-Thurgau, Chardonnay, Silvaner, Sauvignon Blanc) |
| 10–14 °C | Rosé wines                                                                                |
| 9–15 °C  | More mature white wines (e.g. Pinot Blanc, Pinot Gris, Riesling)                          |
| 15–17 °C | Young red wines (e.g. Pinot Noir, Merlot, Gamay, Barbera)                                 |
| 17–18 °C | Mature red wines (e.g. Cabernet Sauvignon, Barolo)                                        |



The lower temperatures are suitable for more simple wines, and the higher ones for the more complex, better quality wines of each category. For very fine wines in particular, follow the wine producers' recommendations.

## 7.3 Notes on saving energy

- Only open the appliance doors when necessary and keep them open for as short a time as possible.
- For ideal air circulation: Do not store bottles too close to each other.

# Care and maintenance

## 8.1 General cleaning instructions

For hygienic storage, the interior should always be kept clean.



**Before cleaning, disconnect the appliance from the mains!**



**Do not use any abrasive cleaning agents or scouring cloths to clean the appliance.**

**Take care not to press too hard when cleaning the plastic surfaces.**

**Do not use acidic or strongly alkaline cleaning agents on metal surfaces. Take care not to damage the refrigerant circuit.**

Risk of damage to the appliance.

- ▶ Clean the steel surfaces with the microfibre cloth and special sponge supplied with the appliance. To bring the shine back to the steel, slightly dampen the microfibre cloth before using it. Please observe the detailed instructions contained in the set supplied.
- ▶ Always wipe in the direction of the satin finish lines of the steel.
- ▶ Do not use the sponge on aluminium surfaces such as the handles or glass shelf trims.

## 8.2 Cleaning the interior

For hygienic storage, the interior should always be kept clean.



**Avoid bringing cold parts made of glass into direct contact with boiling water!**  
**Wash all removable interior features by hand, not in the dishwasher.**

Risk of damage to the appliance or permanent deformation.



**Do not use water on the electrical parts, light bulbs or control panels.**

Risk of damage to the appliance and its parts.

- ▶ Clean wooden shelves just with a slightly damp cloth without any detergent.
- ▶ Clean the interior periodically with a mild soapy solution and wipe completely dry.

## 8.3 Door seals


- ▶ Regularly check the door seals.
- ▶ If dirty, clean using a soft brush and clean water. Wipe dry.

## 8.4 When the appliance is not in use


- ▶ When not in use for an extended period of time, switch the appliance off. Switching the appliance off (see page 12).
- ▶ Empty and clean the appliance.
- ▶ Leave the appliance doors open.

## 8.5 Cleaning the condenser

The condenser is located behind the front ventilation grille in the bottom part of the appliance. Use a vacuum cleaner with a soft brush attachment on full power to clean the slots in the ventilation grille. If there is a heavy build-up of dust, the ventilation grille can be removed in order to clean the condenser more thoroughly. A reminder appears in the display every 180 days. Clean the condenser and then reset the countdown reminder. How to reset the reminder : Using the functions and settings (see page 13).

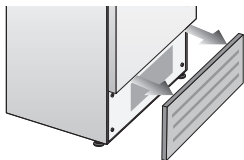

- ▶ Switch off the appliance by pressing and holding the  button for 3 seconds.
- ▶ Wait for around 30 minutes until the condenser has reached the ambient air temperature.
- ▶ Remove the grille below the appliance door(s).

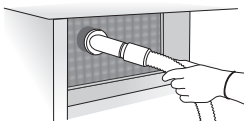

- ▶ Remove all dust deposits from the condenser, taking care not to damage it.
- ▶ Switch the appliance back on by pressing and holding the  button for 3 seconds.



**The fins on the condenser are sharp! Use suitable protective equipment for hands and arms in order to be able to clean the condenser safely.**

## 9 Noises

The appliance can make various noises during operation. Although the appliance is noise-optimized, some noise cannot be eliminated completely. This noise depends on the size of the appliance, how it is installed and the cooling requirements (e.g. fast cooling), the ambient temperature and the installation conditions. Operating noises are particularly audible immediately after switching on the compressor; however, these noises become quieter as the appliance runs.

Unusual noises are often caused by improper installation. The appliance must be installed on a level and stable surface. In open kitchens or in the case of appliances installed in partitioned areas, normal operating noises may seem louder. This is not a fault but rather an effect of the design/architecture.

## 10 Trouble-shooting

This section lists faults that can be solved simply by following the instructions given. If the fault cannot be remedied, please contact Customer Services. Before contacting Customer Services:

- ▶ Please note down the serial number (SN), which is shown on the identification plate , and
- ▶ the sequence of events that led to the fault.

| Display message / Fault               | Solution / Measures                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Display: Power failure!               | <ul style="list-style-type: none"> <li>▪ The appliance turns back on automatically when power is restored and displays the warmest recorded temperatures.</li> <li>▶ Press the  button to acknowledge the acoustic alarm message.</li> </ul>                                                                                                           |
| Display: Appliance door open          | <ul style="list-style-type: none"> <li>▪ The appliance door is left open for longer than 3 minutes.</li> <li>▶ Close the appliance door.</li> </ul>                                                                                                                                                                                                                                                                                     |
| Display: Cooling compartment too warm | <ul style="list-style-type: none"> <li>▪ The appliance displays the warmest recorded temperatures in the corresponding zone.</li> <li>▶ Press the  button to acknowledge the acoustic alarm message.</li> <li>▶ Do not place warm bottles right next to the temperature sensor. Further info: General information on using the appliance.</li> </ul> |
| Display: Cooling compartment too cold | <ul style="list-style-type: none"> <li>▶ Wait for 12 hours.</li> <li>▶ If the fault persists, please contact Customer Services.</li> </ul>                                                                                                                                                                                                                                                                                              |
| Display: Error code                   | <ul style="list-style-type: none"> <li>▶ Press the  button to acknowledge the acoustic alarm message.</li> <li>▶ Contact Customer Services.</li> </ul>                                                                                                                                                                                               |

| Display message / Fault           | Solution / Measures                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Display: Call Customer Services   | <ul style="list-style-type: none"> <li>▶ Press the  button to acknowledge the acoustic alarm message.</li> <li>▶ Keep the appliance door closed.</li> <li>▶ Contact Customer Services.</li> </ul>                                                                                                                                                                                                                                                                          |
| Display: Clean condenser          | <ul style="list-style-type: none"> <li>▶ A message appears every 180 days.</li> <li>▶ Please clean the condenser as soon as possible. Further info: Cleaning the condenser (see page 20).</li> </ul>                                                                                                                                                                                                                                                                                                                                                        |
| The appliance is not working.     | <ul style="list-style-type: none"> <li>▪ If there is an interruption in the power supply: <ul style="list-style-type: none"> <li>▶ Check the power supply.</li> <li>▶ Change the fuse.</li> <li>▶ Reset the automatic circuit breaker.</li> </ul> </li> <li>▪ If the mains voltage is too high: <ul style="list-style-type: none"> <li>▶ Have the electrical installation checked by an expert.</li> </ul> </li> <li>▪ The appliance may otherwise be defective: <ul style="list-style-type: none"> <li>▶ Contact Customer Services.</li> </ul> </li> </ul> |
| Individual zones are not working. | <ul style="list-style-type: none"> <li>▪ The individual zones can be switched off separately by mistake. <ul style="list-style-type: none"> <li>▶ Switch the relevant zone back on again.</li> </ul> </li> </ul>                                                                                                                                                                                                                                                                                                                                            |
| Illumination is not working       | <ul style="list-style-type: none"> <li>▪ The Sabbath mode may be active. <ul style="list-style-type: none"> <li>▶ Deactivate the Sabbath mode. Further info: Using the functions and settings (see page 13).</li> </ul> </li> <li>▪ If the Sabbath mode is deactivated and the illumination is still not working: LED illumination is defective. <ul style="list-style-type: none"> <li>▶ Contact Customer Services.</li> </ul> </li> </ul>                                                                                                                 |

## 11 Technical data

### Product information in accordance with EU Regulation 2019/2016

Appliance-specific data is stored in the European Product Database for Energy Labelling (EPREL). To identify the appliance:

- ▶ scan the QR code on the energy label and follow the link or alternatively
- ▶ manually enter the «Type» designation in the EPREL database under the following link: <https://eprel.ec.europa.eu/>
- ▶ The product fiche can also be found at [www.vzug.com](http://www.vzug.com) under the corresponding product.

### Warranty claim

The manufacturer's warranty is valid for 24 months starting from when the appliance is first put into service.

## External dimensions

- See installation instructions

## Electrical connection

- See identification plate 

## Spare parts

 
V-ZUG Ltd complies with the applicable ecodesign regulations on the availability of spare parts.

## Light sources



**Light sources may only be replaced by a service technician.**

This product contains a light source of energy efficiency class D.



# 12 Disposal

## 12.1 Packaging



**Never allow children to play with packaging material due to the danger of injury or suffocation. Store the packaging material in a safe location or dispose of it in an environmentally-friendly way.**

## 12.2 Safety

Render the appliance unusable to prevent accidents caused by improper use (e.g. through children playing):

- Disconnect the appliance from the mains. With a fixed appliance, this is to be carried out by a qualified electrician. Then cut the mains cable off flush with the appliance.

## 12.3 Disposal



-  The «crossed out wheeled bin» symbol requires the separate collection of waste electrical and electronic equipment (WEEE). Such equipment can contain hazardous, environmentally harmful materials.
- These appliances are to be handed over to a designated collection point for the recycling of electrical and electronic equipment and must not be disposed of with unsorted household waste. And in this way, you will be helping to protect resources and the environment.
- For more information, please contact the local authorities.

# 13 Index

## A

|                            |    |
|----------------------------|----|
| Appliance                  |    |
| Disposal.....              | 23 |
| Appliance functions.....   | 12 |
| Appliance information..... | 17 |

## B

|                |    |
|----------------|----|
| Operation..... | 11 |
|----------------|----|

## C

|                              |    |
|------------------------------|----|
| Care and maintenance .....   | 19 |
| Cleaning.....                | 19 |
| Condenser .....              | 20 |
| Door seals.....              | 20 |
| General tips .....           | 19 |
| Interior.....                | 20 |
| When not in use.....         | 20 |
| Cleaning the condenser ..... | 16 |
| Climate class .....          | 6  |

## D

|                 |    |
|-----------------|----|
| Demo mode ..... | 17 |
| Disposal.....   | 23 |

## E

|                             |    |
|-----------------------------|----|
| Electrical connection ..... | 23 |
| Initial commissioning.....  | 5  |

## G

|                              |   |
|------------------------------|---|
| Instructions for use .....   | 5 |
| Appliance installation ..... | 5 |

## H

|                        |    |
|------------------------|----|
| Humidity control ..... | 13 |
|------------------------|----|

## I

|                           |        |
|---------------------------|--------|
| Identification plate..... | 23, 27 |
| Commissioning.....        | 5      |
| Initial set-up.....       | 8      |
| Introduction .....        | 10     |

## L

|                  |    |
|------------------|----|
| Light mode ..... | 13 |
|------------------|----|

## M

|                         |   |
|-------------------------|---|
| Model designation ..... | 2 |
|-------------------------|---|

## N

|              |    |
|--------------|----|
| Noises ..... | 21 |
| Notes.....   | 25 |

## O

|                                     |       |
|-------------------------------------|-------|
| ON/OFF.....                         | 9, 28 |
| Operating and display elements..... | 9     |
| Operating the appliance.....        | 10    |
| Operation.....                      | 12    |
| Overview .....                      | 10    |

## P

|                    |    |
|--------------------|----|
| Product fiche..... | 22 |
|--------------------|----|

## Q

|               |    |
|---------------|----|
| Queries ..... | 27 |
|---------------|----|

## R

|                                  |    |
|----------------------------------|----|
| Restoring factory settings ..... | 15 |
|----------------------------------|----|

## S

|                                  |    |
|----------------------------------|----|
| Sabbath mode.....                | 14 |
| Safety precautions               |    |
| General.....                     | 4  |
| Service & Support.....           | 27 |
| Service agreement .....          | 27 |
| Setting the date .....           | 15 |
| Setting the language .....       | 15 |
| Setting the time .....           | 15 |
| Safety instructions              |    |
| Intended use.....                | 6  |
| Appliance installation.....      | 5  |
| Appliance-specific .....         | 5  |
| Switching off the appliance..... | 12 |
| Switching on .....               | 10 |
| Switching the appliance on.....  | 10 |
| Symbols.....                     | 4  |

## T

|                        |    |
|------------------------|----|
| Technical data .....   | 23 |
| Set temperature .....  | 11 |
| Temperature unit.....  | 15 |
| Tips .....             | 18 |
| Trouble-shooting ..... | 21 |
| Type.....              | 2  |

## U

|                                |   |
|--------------------------------|---|
| Using for the first time ..... | 8 |
|--------------------------------|---|

## V

|               |   |
|---------------|---|
| Validity..... | 2 |
|---------------|---|

## W

|                           |    |
|---------------------------|----|
| Warranty claim.....       | 22 |
| Value change locked ..... | 11 |

## Notes



## 14 Service & Support



The «Trouble-shooting» section gives you valuable tips on how to deal with minor malfunctions yourself, saving you the time and trouble of calling out a service technician and any cost that goes along with it.

Information on the V-ZUG warranty can be found at [www.vzug.com](http://www.vzug.com) →Service →Warranty information. Please read this information carefully.

Please register your V-ZUG appliance straightaway:

- online at [www.vzug.com](http://www.vzug.com) →Service →Online warranty registration or
- using the enclosed registration card.


This will allow you to take advantage of the best possible support in the event of a fault in the appliance during the guarantee period. You will require the serial number (SN) and appliance designation to register your appliance. You will find them on the identification plate of your appliance.

My appliance information:

SN: \_\_\_\_\_ Appliance: \_\_\_\_\_

Please have this appliance information to hand when contacting V-ZUG. Thank you.

The identification plate  is located below the operating panel on the back wall of the lower cooling compartment.

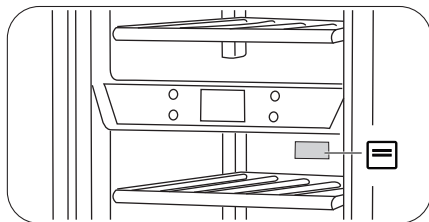

### Your repair order

Call the free service number 0800 850 850 to contact your nearest V-ZUG service centre. You can arrange an on-site visit by us by phone if you wish.

### General queries, accessories and service agreement

V-ZUG will be happy to help you with any general administrative or technical queries, to accept your orders for accessories and spare parts and to inform you about our progressive service agreements. You can contact us by calling tel. +41 58 767 67 67 or by going to our website at [www.vzug.com](http://www.vzug.com).

# Quick instructions



## Navigation buttons

- ON/OFF (hold for 3 seconds)
- Home / Start screen
- Acknowledge alarm
- BACK: Cancel/Discard entry



## Navigation touch display

### ►≡ Functions

- Humidity control
- Permanent illumination
- Sabbath mode
- Daily illumination schedule



### User setting

- Date
- Time
- Language
- Temperature unit °C / °F

### Other settings

- Restore factory setting
- Condenser reminder
- Demo mode
- Information about the appliance
- Service



1283878-02

